



SoundBox Setup (Start Here)

Step 1: Setup your table in desired location, or use the box as a last resort.

Step 2: Setup both speaker stands with two legs facing forward and one to the back (Sound Town logo & cable clip facing back), one on each side of your table w/attached globe lights facing forward.

Step 3: Slide down tripod on each speaker stand until it aligns with the white line then tighten knob. Slide in speaker poles down to the hole with white on it and insert the silver keys, then tighten knob.

Step 4: Set cable bag and mic box aside. Place TV in the middle of table facing forward. Plug in power strip to an outlet within 15 ft (use an extension cord if needed) and place strip directly under back of TV. Plug in TV to power strip and make sure all behind TV connections are secure.

For Karaoke Setup: Use lower table if need be and simply rotate the TV 180 degrees as you will use it for lyrics. The TV screen should face you and the speakers facing the crowd.

Step 5: Remove speakers and place them on speakers stands using the pole mount at the bottom of each speaker, then tighten knob.

For Steps Below: The Main Speaker Has Main Written on the Back in White Marker

Step 6: Locate cable bag. Grab cable with **BLUE** strap and unravel. Grab the end of the cable with blue marker and plug it into the back of the MAIN speaker's LINE OUT (also with blue marker). Slide cable under both cable clips to your liking and pull the other end of cable to the other speaker. Run cable up cable clips on the other speaker to its MIC/LINE INPUT hole and plug in securely.

Step 7: Grab power cables with **GREEN** strap and unravel. Plug ends with green marker to the back of each speaker (also with green marker). Slide cable under each cable clip then plug in to power strip laying below the back of TV.

Step 8: Grab cable with **YELLOW** strap and unravel. Plug red and white with yellow marker into back of the MAIN speakers LINE INPUT red and white holes (also with yellow marker). Plug other end into phone that will be used for event (recommended). Or connect via Bluetooth by pressing mode on the back of the MAIN speaker until BT is shown. Find BPA10 on phone Bluetooth devices to connect.

For Karaoke Setup: Plug the other end into the aux hole (instead of phone) located behind TV to device with a white K on it. Or connect via TV Bluetooth by the clicking gear icon top right on TV remote, click sound out, arrow over to Bluetooth device, click device list, find/click on BPA10. (Main speaker must be in Bluetooth mode) Also must be on WiFi to use YouTube! To connect, click gear icon again arrow down to Network and connect.

Step 9: Grab cables with **RED** strap and unravel. Plug each cables USB with red marker to the top USB slot located on the back of each speaker (also with red marker) towards the top. Slide under cable clip. Plug other end into the top of each globe light.

Speaker Setup

Step 1: Click power switch up located on the back bottom left of each speaker.

Step 2: Make sure all knobs on the back of both speakers are aligned to the white marks for best listening experience.

Adjust (VOLUME2) as needed from the back of MAIN speaker only or use phone volume to lower and raise as necessary. We set it low to start.

Step 3: Lower volume on phone 1 or 2 notches from max volume to reduce distortion.

Microphone Setup

Step 1: Grab microphone box and pull the receiver out. Plug receiver into the back of the MAIN speaker's MIC/LINE INPUT ¼ inch hole (**GOLD** marker). Hold power button on back of receiver to turn on, should see blue light on under BT.

Step 2: Make sure speakers are on.

Step 3: Grab one microphone and hold PWR button down until on. Do same for other mic if using.

Step 4: Click button until you see U3 on both mics, will go back to channel number, that is normal.

When not using, keep receiver & mics off, hold PWR down on both. Charging cables are top left in the mic box that charge the microphone and receiver if needed (will come fully charged).

Do not stand directly in front of speakers when using.

OVER



Light Functionality (Step 9 Must Be Complete)

Remotes are attached to the back of each light. Must set same settings on each remote when changing. A1-A7 are all for fades. MUSIC 1 is sound activated, will go off if no sound. MUSIC 2 is also sound activated, will switch to fade if no sound. ON/OFF power located top left of remote.

TV Functionality

Step 1: Grab remote from cable bag and power TV on, click home button if not already there (if you get lost always click home button to reset).

Step 2: Click on media player (should be first app), then click on ULTRA to access USB folders.

Step 3: Click on Photo Slideshow or Visualizer to start either.

Packing Equipment for Return

Step 1: Insert 1st speaker face DOWN snug against box



Step 2: Insert 2nd speaker face UP w/white foam between them



Step 3: Place small black foam snug between speakers & box



Step 4: Lay square white foam on top of both speakers



Step 5: Lay TV face down with legs against box on side w/gap



Step 6: Loosen knob & pull-out speaker pole from both stands



Step 7: Lay 1st stand down w/ globe light down & tilted snug into corner speaker face



Step 8: Lay 2nd stand next to 1st one the same way




Step 9: Lay speaker poles across the top of speaker stands (Step 6)



Step 10: Place in cable bag w/any loose items and mic box as shown



Step 11: Fill in open area with provided bubble wrap

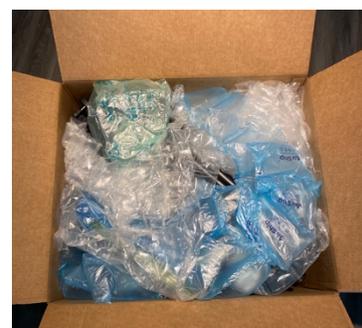

Step 12: Use included tape & return label attach for shipment back; UPS dropoff

